


TYPICALLY ENCLOSURES ARE INSTALLED WITH THE INSIDE DOOR CLOSEST TO THE SHOWER HEAD FOR BETTER WATERPROOFING AND EASY ACCESS TO THE CONTROLS. THESE INSTRUCTIONS DEPICT A UNIT WITH THE SHOWER HEAD ON THE RIGHT AND THE INSIDE PANEL ON THE LEFT.

1. A LEVEL HEADER IS CRITICAL TO PROPER OPERATION OF THE SLIDING PANELS. THE TWO ATTACHMENT HOLES FOR THE HEADER BRACKETS ARE LOCATED AT THE UNIT HEIGHT MINUS 3-3/8" (GLASS HEIGHT MINUS 2-1/8"). IF THE CURB IS NOT LEVEL (REFERENCE DETAILS BELOW) THE HOLES MUST BE ADJUSTED FOR ANY OUT OF LEVEL CONDITIONS ON THE CURB.

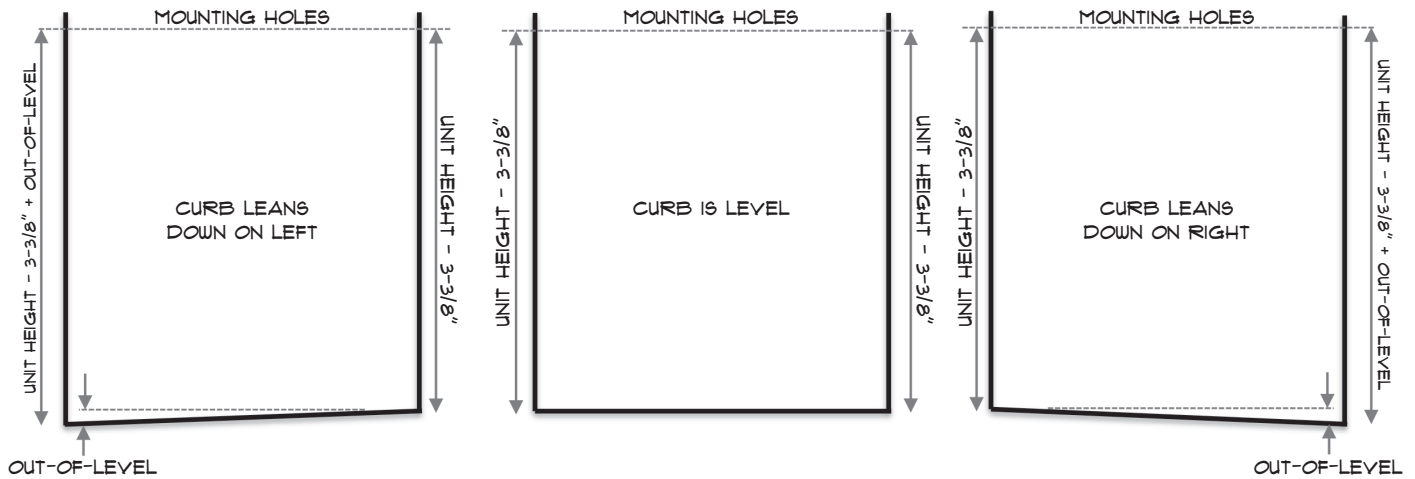


2. USE PAINTER'S TAPE AND MARK THE CENTER LINE OF THE MOUNTING HOLES. USE A LEVEL TO POSITION THE HOLES ON THE CENTER OF THE CURB. CENTER THE MOUNTING BRACKETS ON THE LINE AND USE THE BRACKET AS A TEMPLATE TO MARK THE POSITION OF THREE HOLES. NOTE THE POSITION OF THE RUBBER BUMPERS AND ROTATE THE BRACKETS SO THE BUMPER ON THE INSIDE OF THE BRACKET IS CLOSEST TO THE SHOWER HEAD.




3. IF USING THE WALL PLUGS, DRILL SIX $\frac{1}{4}"$ DIAMETER HOLES IN THE POSITIONS MARKED. ATTACH THE BRACKETS AND RUBBER BUMPERS WITH THE SCREWS PROVIDED. IF NOT USING THE PLUGS, DRILL $\frac{3}{16}"$ DIAMETER HOLES THRU THE SUBSTRATE AND ALLOW THE SCREWS TO TAP INTO THE STUD.


4.

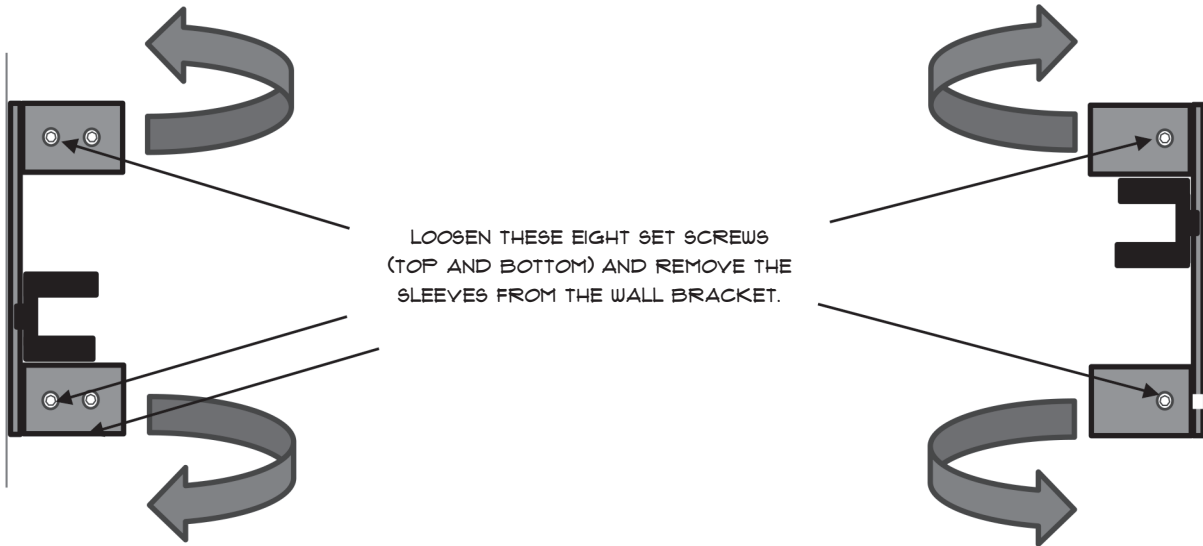


5.

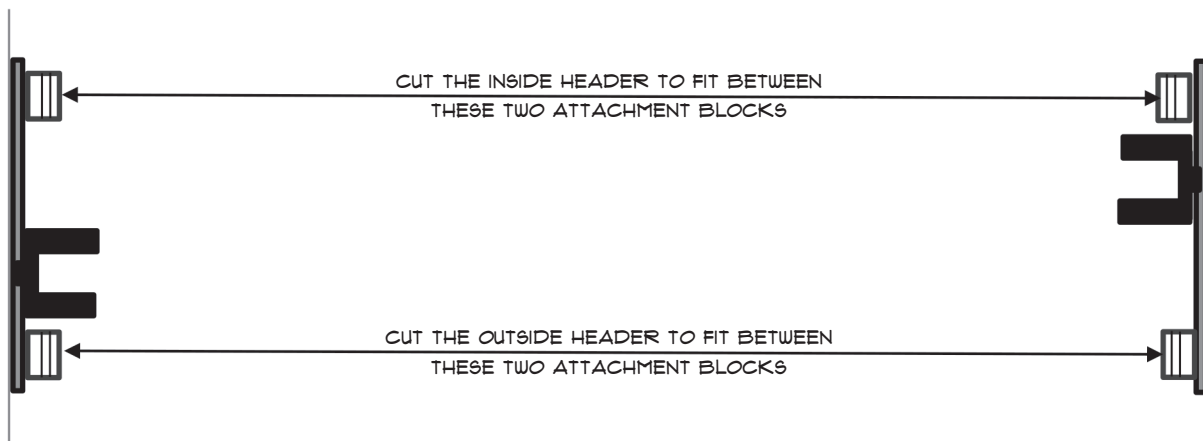

6.

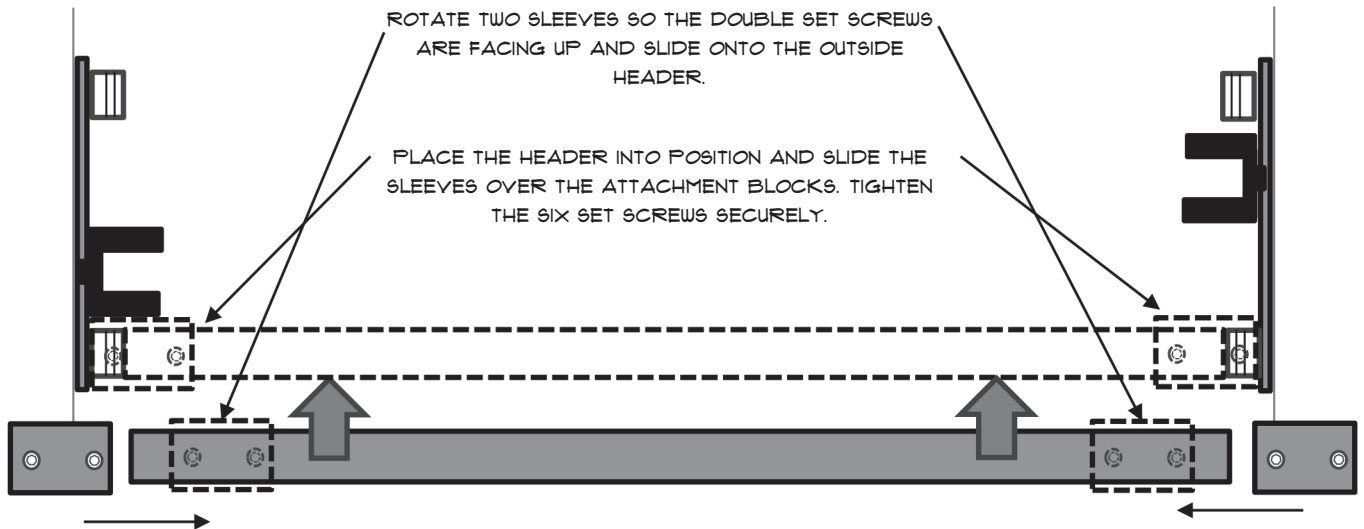


7.

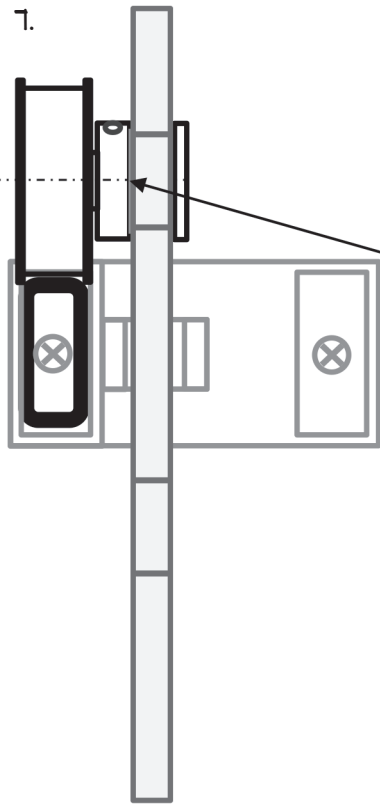

USING THE WRENCH PROVIDED, ATTACH TWO ROLLERS TO THE TOP OF THE OUTSIDE PANEL AND HANG ON THE OUTSIDE HEADER.

NOTE THE HOLE IN THE ROLLER. POSITION IT IN THE UP POSITION. THIS WILL BE USED LATER TO ADJUST THE PANEL.


8.

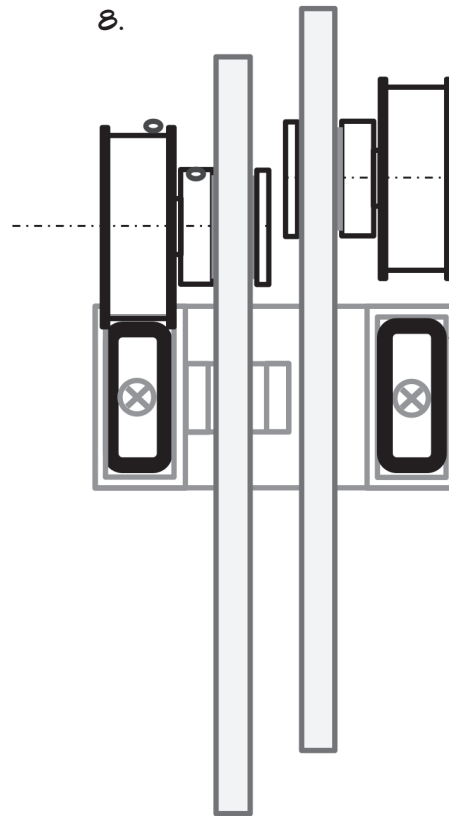

ATTACH THE ROLLERS TO THE INSIDE PANEL AND POSITION NEXT TO THE OUTSIDE PANEL

INSTALL THE INSIDE HEADER PER PREVIOUS INSTRUCTIONS AND HANG THE PANEL ON THE HEADER

9.

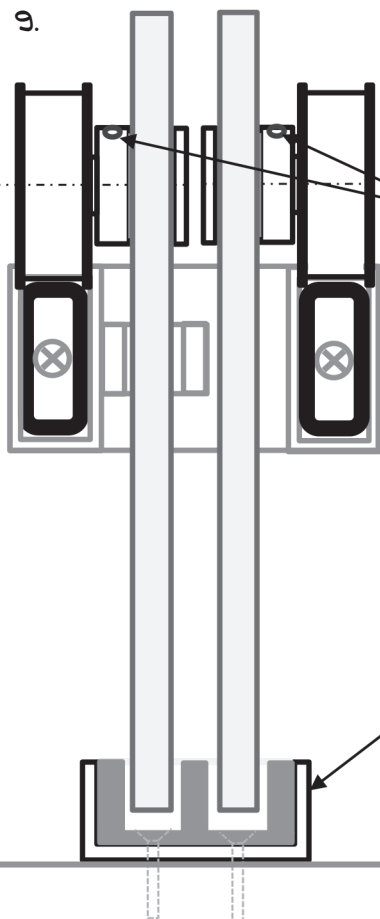


SLIDE THE PANELS INTO POSITION. TO ADJUST THEM:

1. LOOSEN THE ROLLER.
2. INSERT AN ALLEN WRENCH INTO THE HOLE AND ROTATE UNTIL THE PANEL IS FLUSH WITH THE WALL
3. TIGHTEN THE ROLLER

INSTALL THE BOTTOM GUIDE IN THE CENTER OF THE PANELS. APPLY SILICONE TO THE BOTTOM OF THE GUIDE AND IN THE DRILLED HOLES.

10.

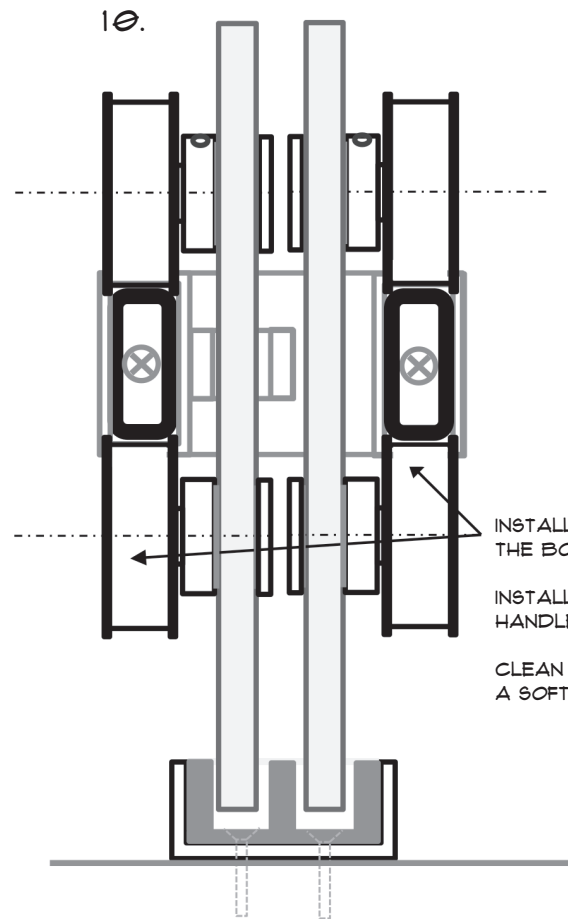

INSTALL AND ADJUST THE BOTTOM ROLLERS.

INSTALL THE PULL HANDLES.

CLEAN THE UNIT WITH A SOFT CLOTH.